 


DIGITAL PHOTO FRAME

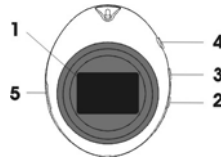

1. Brief Description of Outline

1. LCD screen
2. Menu key
3. Page down key
4. Page up key
5. USB port



2. Related Parameter

Support format: BMP, JPG, PNG, GIF and TIFF

Display: **1.1" LCD screen**

Stored picture quantity: about **180** sheets

Communications interface: **USB 1.1** standard interface

Power supply: Built-in **3.7V** lithium cell or **USB_5V** power supply

3. Button Description

- **Menu key**
Used to boot, to open the main menu and to confirm the selection, etc.
- **Page up key**
Used for changing a picture forward, moving the menu entry upward and reducing the time and digit, etc.
- **Page down key**
Used for changing a picture backward, moving the menu entry downzone and increasing the time and digit, etc.

4. Installation Driver and Photo Viewer Software

Note: To use the product, please install the driver first and then connect the frame to the computer, otherwise,

the frame driver may not complete the installation normally.

Install the CD driver, which supports **Windows 2000 / XP / VISTA**.


Under the situation that the product is not connected to the computer:


a. Insert the installation CD into the computer photo driver

b. Click [**Install Driver**] button at the guidance window popped out, carry on the installation according to the screen wizard.

c. Reboot the computer

To install the **Photo Viewer** software, it is also available to run directly the **Setup.exe** installation file

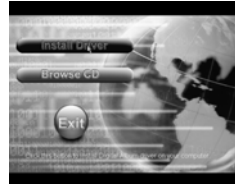

in the CD Driver folder. After the installation is completed, the **Photo Viewer** prompt icon  may appear on the computer desktop.

5. Description of Each Operation Mode

5.1 Picture browse mode

The default is picture browse mode after booting; it is able to browse picture under this mode;

5.2 Clock display mode

- Browse picture mode, short press the **Menu** key to change over to the main menu; Press Up/Down button repeatedly to select "Clock Disp", then choose "Disp Clock Normal" or "Disp Clock Water Mark". Short press the **menu** key again to enter the display mode you choose.

5.3 Menu entry and setting mode

Under the browse picture mode, short press the **menu** key to pop out the function main menu, used for system setting and displaying clock, etc.

5.4 Turn power on/off mode

(1) Power off

Under the picture mode, short press the **menu** key to pop out the main menu and choose Entry 1 ("OFF"). Short press the **menu** key to confirm and to enter the power off mode immediately; all the other sections will stop operation except for the clock. At this time, it is of the most energy saving;

(2) Power on


Under the power off mode, long press the **menu** key until the screen displays and the booting is completed;

5.5 USB on-line mode

The USB on-line mode includes the USB Charge and the USB Update modes.

With the computer connecting to USB, the selection menus of USB Charge and USB Update will be popped out;

- When selecting the mode of USB Charge, it will return back to the normal operation mode, and the USB on-line will only

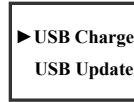

be used for lithium cell charging;

- When selecting the mode of USB Update, it is available to download picture with the Photo Viewer download software in the computer;

The battery icon under the screen during the charging process is displayed dynamically. When the battery icon is stationary and in full lattice display, it means the battery has been fully charged.

When the charging or the picture download is completed, pull out the USB plug, and it will enter picture display mode automatically. The battery will be charged fully after 2 hours.

6. Description of Menu Entry

Under the picture mode, short press the menu key to pop out the menu respectively as follows:

<1> OFF

<2> Disp Mode



<3> Clock Set

<4> Auto ON/OFF

<5> Clock Disp

<6> Exit

Among them:

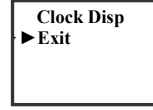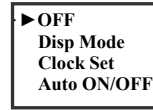


6.1 Power OFF menu entry

After using the **menu** key to select “**OFF**” menu, it will enter the power off mode immediately; all the other sections will stop operation except for the clock, and at this time, it is of the most energy saving;

Note: When connecting the USB charging and selecting the entry, the product will still work to indicate the charging status.

6.2 Disp Mode

The picture play includes "Auto" and "Manual" modes. Enter

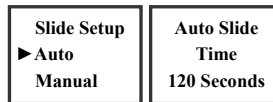

menu of Disp Mode to have two entries:

- (1) Auto: The two pictures auto change over interval can be set up to any time in the range of 0 ~ 120 seconds. Press **Page Up/Down** key to adjust, and press the **menu** key again to return back to the main menu;
- (2) Manual: The picture can only be changed over after pressing **Page Up/Down** key;

6.3 Clock Set

Enter the mode of Clock Set to set up the year/ month/ day/ hour/ min/ sec, and the week will be updated automatically as per the year/ month/ day value. Set up the year first, and press the **Page Up/ Down** key to adjust the year. Press the **menu** key to jump to the setting of month, and then the day, hour, minute and second setting accordingly. Press the **menu** key again after completing the setting of the second to return back to the main menu.

2007-08-06 13:55:45 Monday

6.4 Auto ON/OFF

▶ Auto ON/OFF ON Auto ON/OFF OFF

ON 00:00 OFF 00:00

Under "Disp Clock Normal" mode, There are 2 options for choosing:

Auto ON/OFF ON:

- Press **Power/Menu** button.
- Press **Up/Down** button to set the value of the auto power on/off time and press Power/Menu button to select the hour and minute.
- Press **Power/Menu** button to confirm.
- Press **Up/Down** button repeatedly to select "Exit".
- Press **Power/Menu** button to confirm.

Auto ON/OFF OFF:


- Press **Power/Menu** button to confirm.
- Press **Up/Down** button repeatedly to select "Exit".
- Press **Power/Menu** button to confirm.

This means that you are exiting the auto power on/off mode if you execute this function.

6.5 Clock Disp

Under "Disp Clock Normal" mode, The full screen displays year/ month/ day/ hour/ minute/ second, and week. Short press the Page Up/Down key or menu key to return back to the picture display mode.

Under "Disp Clock Water Mark" mode, the clock will be displayed at the right corner of the image synchronously.

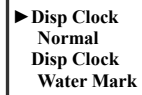

► Disp Clock
Normal
Disp Clock
Water Mark


6.6 Exit


Exit from the main menu and return back to the picture display mode automatically.

Note: After entering the menu, it will exit from the menu mode if not operating within one minute, and it will return back to the browse picture mode automatically.

7. Operating Instructions of Picture Download



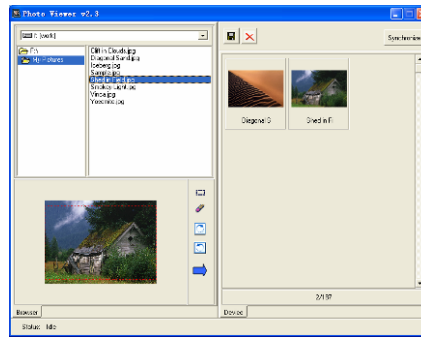

7.1 If the USB line is inserted arbitrarily at any moment, this product will pop out the USB charge and USB Update menu entries. Select the USB Update to enter standby download mode. In this case, a virtual movable disc icon will appear on the PC resource manager. However, that disc can't be operated, please don't try to open or format that disc;


7.2 Double click  icon on the computer desktop to download Photo Viewer software to enter that software main interface, as shown in Fig.1 below:




▲ Fig. 1


7.3 The interface of Photo Viewer is divided into 2 sections: “**Browser**” window and “**Device**” window. Select the driver and file folder where the picture is located in “**Browser**” window, click the picture file in

the picture file tabulator. Display the entire picture in the picture preview zone, and automatically present the maximum selectable red dotted line block. It is available to drag the dotted line to the area you want, or to click the eraser  button to blank the dotted line block. Click  button or press down the mouse left button to drag in the picture preview zone, and it is available to display the red dotted line block for the selection of picture zone. Click  or  button to revolve the picture.

7.4 Click  button, release the picture zone selected to the right side picture display zone, and operate other pictures as per this operating method.


7.5 Select the picture in “**Device**” window, then click  button to save the selected picture in other

location. Click the  button to delete the selected picture.

- 7.6 Click the download button  at the upper right corner, and download all the pictures in “**Device**” window to the frame until the software indicates (see Fig. 2 below) download success. After a successful downloading, the picture in the frame will be renewed into the same contents in “**Device**” window.



▲ Fig.2

7.7 After the download is completed, please firstly click the upper right  button to turn off the Photo Viewer software, and then pull out the USB line.

8. Other Descriptions

- When connected to PC, it will be charged automatically with a flashing battery symbol on the screen. When it is fully charged, the battery symbol won't flash.
- It is needed to reboot the Photo Viewer download software when the USB line is inserted each time, otherwise, it can't download.

9. Packing Statement

- Photo frame
- User Guide
- USB Cable
- Installation CD
- Key buckle